# Threaded resistance thermometer With protection tube, tubular design Model TR11-C

WIKA data sheet TE 60.14











for further approvals see page 2

## **Applications**

- Machine building, plant and vessel construction
- Sanitary, heating and air-conditioning technology

## Special features

- Application ranges from -50 ... +250 °C [-58 ... +482 °F]
- With integrated fabricated protection tube
- Sensor built in the tip of the protection tube (standard)
- Replaceable measuring insert (option)
- Explosion-protected versions are available for many approval types (see page 2)



# **Description**

Resistance thermometers of this series are designed for screw-fitting directly into the process, mainly in vessels and pipelines.

These thermometers are suitable for liquid and gaseous media under moderate mechanical load and normal chemical conditions. The protection tube made of stainless steel is all welded and screwed into the connection head. An optional measuring insert (tubular design) can be removed without taking out the complete sensor from the plant. This enables inspection, measuring equipment monitoring or, when servicing is necessary, replacement while the plant is running.

Fig. left: connection head model BSZ-H Fig. right: connection head model KN4-A

Insertion length, process connection, protection tube design, connection head, type and number of sensors, accuracy and connection method can each be selected to suit the respective application.

A large number of different explosion-protected approvals are available for the TR11-C.

Optionally we can fit analogue or digital transmitters from the WIKA range into the connection head of the TR11-C.

WIKA data sheet TE 60.14 · 03/2021

Page 1 of 14



## **Explosion protection (option)**

The permissible power  $P_{max}$  as well as the permissible ambient temperature for the respective category can be seen on the Ex certificate or in the operating instructions.

#### Attention:

Only with the correspondingly suitable protective fitting is operation in dust Ex hazardous areas permissible.

Transmitters have own certificates for hazardous areas. The permissible ambient temperature ranges of the built-in transmitters can be taken from the corresponding transmitter operating instructions and approvals.

## **Approvals (explosion protection, further approvals)**

Logo	Description	Country
CE	EU declaration of conformity EMC directive <sup>1)</sup> EN 61326 emission (group 1, class B) and interference immunity (industrial application)	European Union
<b>(Ex)</b>	ATEX directive (option) Hazardous areas  - Ex i Zone 0 gas II 1G Ex ia IIC T3 T6 Ga Zone 1 mounting to zone 0 gas II 1/2G Ex ia IIC T3 T6 Ga/Gb Zone 1 gas II 2G Ex ia IIC T3 T6 Gb Zone 20 dust II 1D Ex ia IIIC T125 T65 °C Da Zone 21 mounting to zone 20 dust II 1/2D Ex ia IIIC T125 T65 °C Da/Db Zone 21 dust II 2D Ex ia IIIC T125 T65 °C Db - Ex n 2) Zone 2 gas II 3G Ex nA IIC T1 T6 Gc X Zone 22 dust II 3D Ex tc IIIC T440 T80 °C Dc X	
IEC. TECEN	Hazardous areas - Ex i Zone 0 gas Ex ia IIC T3 T6 Ga Zone 1 mounting to zone 0 gas Ex ia IIC T3 T6 Ga/Gb Zone 1 gas Ex ia IIC T3 T6 Gb Zone 20 dust Ex ia IIC T125 T65 °C Da Zone 21 mounting to zone 20 dust Ex ia IIIC T125 T65 °C Da/Db Zone 21 dust Ex ia IIIC T125 T65 °C Db	International
EHLEX	EAC (option)  Hazardous areas  - Ex i	Eurasian Economic Community
<b>(</b>	Ex Ukraine (option)  Hazardous areas - Ex d Zone 0 gas II 1G Ex ia IIC T1 T6 Ga Zone 1 mounting an zone 0 gas II 1/2G Ex ia IIC T1 T6 Ga/Gb Zone 1 gas II 2G Ex ia IIC T1 T6 Gb Zone 20 dust II 1D Ex ia IIIC T65°C Da Zone 21 mounting an zone 20 dust II 1/2D Ex ia IIIC T65°C Db	Ukraine

Logo	Description		Country
IMMETHO	INMETRO (option) Hazardous areas - Ex i Zone 0 gas Zone 1 mounting an zone 0 gas Zone 1 gas Zone 20 dust Zone 21 mounting to zone 20 dust Zone 21 dust	Ex ia IIC T3 T6 Ga Ex ib IIC T3 T6 Ga/Gb Ex ib IIC T3 T6 Gb Ex ia IIIC T125 T65 °C Da Ex ib IIIC T125 T65 °C Da/Db Ex ib IIIC T125 T65 °C Db	Brazil
<b>E</b> s	KCS - KOSHA (option) Hazardous areas - Ex i Zone 0 gas Zone 1 gas	Ex ia IIC T4 T6 Ex ib IIC T4 T6	South Korea
-	PESO (option) Hazardous areas - Ex i Zone 0 gas Zone 1 mounting to zone 0 gas Zone 1 gas	Ex ia IIC T1 T6 Ga Ex ib IIC T3 T6 Ga/Gb Ex ib IIC T3 T6 Gb	India
©	GOST Metrology, measurement technology		Russia

Instruments marked with "ia" may also be used in areas only requiring instruments marked with "ib" or "ic".

If an instrument with "ia" marking has been used in an area with requirements in accordance with "ib" or "ic", it can no longer be operated in areas with requirements in accordance with "ia" afterwards.

Approvals and certificates, see website

<sup>1)</sup> Only for built-in transmitter 2) Only with model BSZ or BSZ-H connection head (see "Connection heads")

#### Sensor

#### **Measuring element**

Pt100 (measuring current: 0.1 ... 1.0 mA) 1)


Connection method	
Single elements	1 x 2-wire 1 x 3-wire 1 x 4-wire
Dual elements	2 x 2-wire 2 x 3-wire 2 x 4-wire <sup>2)</sup>

Validity limits of the class accuracy in accordance with EN 60751				
Class	Thin-film			
Class B	-50 +250 °C			
Class A 3)	-30 +250 °C			
Class AA 3)	0 150 °C			

- 1) For detailed specifications for Pt100 sensors, see Technical information IN 00.17 at www.wika.com.
- 2) Not with 3 mm diameter3) Not with 2-wire connection method

The table shows the temperature ranges listed in the respective standards, in which the tolerance values (class accuracies) are valid.

#### Electrical connection (colour code per IEC/EN 60751)

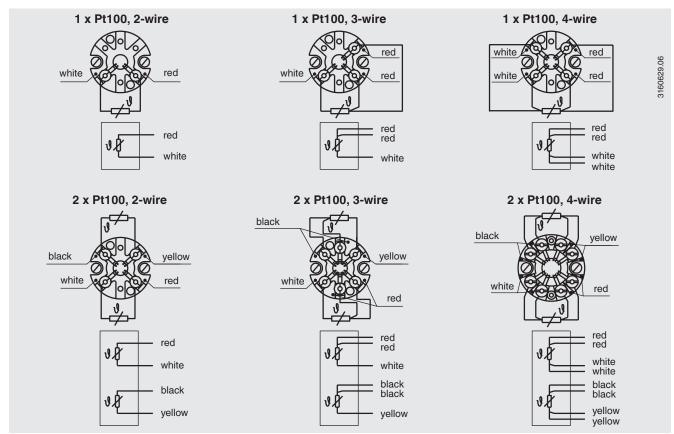

For the electrical connections of built-in temperature transmitters see the corresponding data sheets or operating instructions.

#### **Connection head**

■ European designs per EN 50446 / DIN 43735













BSZ, **BSZ-K** 

BSZ-H, BSZ-HK, BSZ-H / DIH10

**BSS** 

Model	Material	Cable entry thread size	Ingress protection (max.) <sup>1)</sup> IEC/EN 60529	Сар	Surface	Connection to neck tube
BS	Aluminium	M20 x 1.5 or ½ NPT 3)	IP65 <sup>4)</sup>	Flat cap with 2 screws	Blue, lacquered 5)	M24 x 1.5
BSZ	Aluminium	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65 <sup>4)</sup>	Spherical hinged cover with cylinder head screw	Blue, lacquered <sup>5)</sup>	M24 x 1.5
BSZ-H	Aluminium	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65 <sup>4)</sup>	Raised hinged cover with cylinder head screw	Blue, lacquered <sup>5)</sup>	M24 x 1.5
BSZ-H / DIH10 <sup>2)</sup>	Aluminium	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65	Raised hinged cover with cylinder head screw	Blue, lacquered <sup>5)</sup>	M24 x 1.5
BSS	Aluminium	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65	Spherical hinged cover with clamping lever	Blue, lacquered <sup>5)</sup>	M24 x 1.5
BSS-H	Aluminium	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65	Raised hinged cover with clamping lever	Blue, lacquered <sup>5)</sup>	M24 x 1.5
BVS	Stainless steel	M20 x 1.5 <sup>3)</sup>	IP65	Precision-cast screw- on lid	Blank, electropolished	M24 x 1.5
BSZ-K	Plastic	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65	Spherical hinged cover with cylinder head screw	Black	M24 x 1.5
BSZ-HK	Plastic	M20 x 1.5 or ½ NPT <sup>3)</sup>	IP65	Raised hinged cover with cylinder head screw	Black	M24 x 1.5

Model	Explosion protection						
	without	Ex i (gas) Zone 0, 1, 2	Ex i (dust) Zone 20, 21, 22	Ex n (gas) Zone 2	Ex t (dust) Zone 22		
BS	х	x	-	-	-		
BSZ	х	x	х	х	Х		
BSZ-H	х	x	х	х	Х		
BSZ-H / DIH10 <sup>2)</sup>	х	x	-	-	-		
BSS	х	x	-	-	-		
BSS-H	х	x	-	-	-		
BVS	х	x	-	-	-		
BSZ-K	х	x	-	-	-		
BSZ-HK	Х	х	-	-	-		

<sup>1)</sup> IP ingress protection of the connection head. The IP ingress protections of the complete instrument TR11-C must not inevitably correspond to the connection head.
2) LED display DIH10
3) Standard (others on request)

<sup>4)</sup> Ingress protections, which describe temporary or lasting submersion, available on request 5) RAL 5022

#### ■ North American designs



KN4-P

Model	Material	Cable entry thread size	Ingress protection (max.) 1) IEC/EN 60529	Cover / Cap		Connection to neck tube
KN4-A	Aluminium	½ NPT or M20 x 1,5 <sup>2)</sup>	IP65	Screw-on lid	Blue, lacquered 3)	M24 x 1.5
KN4-P <sup>4)</sup>	Polypropylene	½ NPT	IP65	Screw-on lid	White	½ NPT

Model	Explosion protection						
	without	Ex i (gas) Zone 0, 1, 2	Ex i (dust) Zone 20, 21, 22	(0)	Ex t (dust) Zone 22		
KN4-A	х	х	-	-	-		
KN4-P 4)	х	-	-	-	-		

<sup>1)</sup> IP ingress protection of the connection head. The IP ingress protections of the complete instrument TR11-C must not inevitably correspond to the connection head. 2) Standard (others on request) 3) RAL 5022 4) On request


## Connection head with digital display



Connection head BSZ-H with LED display model DIH10 see data sheet AC 80.11

To operate the digital displays, a transmitter with a 4 ... 20 mA output is always required.

## **Cable entry**

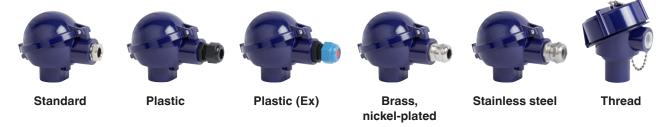

The pictures show examples of connection heads.

Cable entry	Cable entry thread size	Min./max. ambient temperature
Standard cable entry 1)	M20 x 1.5 or ½ NPT	-40 +80 °C
Plastic cable gland (cable Ø 6 10 mm) 1)	M20 x 1.5 or ½ NPT	-40 +80 °C
Plastic cable gland (cable Ø 6 10 mm), Ex e 1)	M20 x 1.5 or ½ NPT	-20 +80 °C (standard) -40 +70 °C (option)
Nickel-plated brass cable gland (cable Ø 6 12 mm)	M20 x 1.5 or ½ NPT	-40 +80 °C
Stainless steel cable gland (cable Ø 7 12 mm)	M20 x 1.5 or ½ NPT	-40 +80 °C
Plain threaded	M20 x 1.5 or ½ NPT	-

Cable entry	Colour	Ingress	gress Explosio		sion protection			
		protection (max.) IEC/EN 60529 <sup>2)</sup>	without	Ex i (gas) Zone 0, 1, 2	Ex i (dust) Zone 20, 21, 22	Ex n (gas) Zone 2	Ex t (dust) Zone 22	
Standard cable entry 1)	Blank	IP65	х	х	-	-	-	
Plastic cable gland 1)	Black or grey	IP66 3)	Х	-	-	-	-	
Plastic cable gland, Ex e 1)	Light blue	IP66 3)	Х	x	Х	-	-	
Plastic cable gland, Ex e 1)	Black	IP66 <sup>3)</sup>	Х	-	-	Х	Х	
Nickel-plated brass cable gland	Blank	IP66 3)	Х	-	-	-	-	
Nickel-plated brass cable gland, Ex e	Blank	IP66 <sup>3)</sup>	Х	x	Х	Х	Х	
Stainless steel cable gland	Blank	IP66 <sup>3)</sup>	х	Х	Х	-	-	
Stainless steel cable gland, Ex e	Blank	IP66 3)	х	x	Х	х	X	
Plain threaded	-	IP00	Х	х	x <sup>4)</sup>	x <sup>4)</sup>	x <sup>4)</sup>	

<sup>1)</sup> Not available for BVS connection head
2) IP ingress protection of the connection head. The IP ingress protections of the complete instrument TR11-C must not inevitably correspond to the cable gland.
3) Ingress protections, which describe temporary or lasting submersion, available on request
4) Suitable cable gland required for operation

### Ingress protection per IEC/EN 60529

#### Degrees of protection against solid foreign bodies (defined by the first index number)

First index number	Degree of protection / short description	Test parameter
5	Dust-protected	per IEC/EN 60529
6	Dust-tight Dust-tight	per IEC/EN 60529

#### Degrees of protection against water (defined by the second index number)

Second index number	Degree of protection / short description	Test parameter
4	Protected against splash water	per IEC/EN 60529
5	Protected against water jets	per IEC/EN 60529
6	Protected against strong water jets	per IEC/EN 60529
<b>7</b> <sup>1)</sup>	Protected against the effects of temporary immersion in water	per IEC/EN 60529
<b>8</b> <sup>1)</sup>	Protected against the effects of continuous immersion in water	by agreement

<sup>1)</sup> Ingress protections, describing temporary or permanent immersion, on request

Standard ingress protection of model TR11-C is IP65.

The stated degrees of protection apply under the following conditions:

- Use of a suitable cable gland
- Use of a cable cross-section appropriate for the gland or select the appropriate cable gland for the available cable
- Adhere to the tightening torques for all threaded connections

#### **Transmitter**

#### Mounting onto the measuring insert

With mounting on the measuring insert, the transmitter replaces the terminal block and is fixed directly to the terminal plate of the measuring insert.

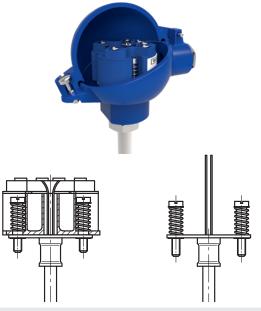


Fig. left: Measuring insert with mounted transmitter (here: model T32) Fig. right: Measuring insert prepared for transmitter mounting

#### Mounted within the cap of the connection head

Mounting the transmitter in the cap of the connection head is preferable to mounting it on the measuring insert. With this type of mounting, for one, a better thermal insulation is ensured, and in addition, exchange and mounting for servicing is simplified.









Output signal 4 20 mA, HART® protocol			
Transmitter (selectable versions)	Model T15	Model T32	
Data sheet	TE 15.01	TE 32.04	
Output			
4 20 mA	x	х	
HART® protocol	-	x	
Connection method			
1 x 2-wire, 3-wire, 4-wire	x	х	
Measuring current	< 0.2 mA	< 0.3 mA	
Explosion protection	Optional	Optional	

#### Possible mounting positions for transmitters

Connection head	T15	T32
BS	0	-
BSZ	0	0
BSZ-K	0	0
BSZ-H, BSZ-HK	•	•
BSZ-H / DIH10	0	0
BSS	0	0
BSS-H	•	•
BVS	0	0
KN4-A / KN4-P	0	0

O Mounted instead of terminal block

- Mounted within the cap of the connection head
- Mounting not possible


The mounting of a transmitter on the measuring insert is possible with all the connection heads listed here. The fitting of a transmitter in the (screw) cap of a North American design connection head is not possible.

Mounting of 2 transmitters on request.

For a correct determination of the overall measuring deviation, the sensor and transmitter measuring deviations must be added.

## **Components model TR11-C**

# Process connection: mounting thread, welded $(l_5)$ ØF1 $N(M_H)$ (7)(M) U1 ca.10 Process connection: compression fitting

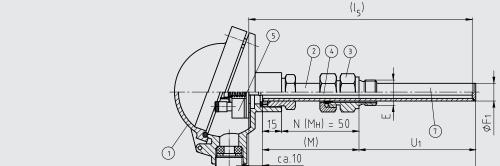

1	 -1.
Leo	

① Connection head

Neck tube 2

3 Process connection

4 Measuring insert

(5) Terminal block/transmitter (option)

Transmitter (option)

Protection tube model TW35

(L) Overall length protection tube

 $\begin{matrix} I_5 \\ U_1 \end{matrix}$ Measuring insert length

Protection tube insertion length per DIN 43772

Protection tube diameter  $ØF_1$ 

Mounting thread Ε

 $N\left(M_{H}\right)$  Neck length


Neck tube length


Fig. with parallel or tapered thread see chapter "Protection tube"

The figures show the optional exchangeable measuring insert.

#### **Protection tube**

#### Protection tube designs

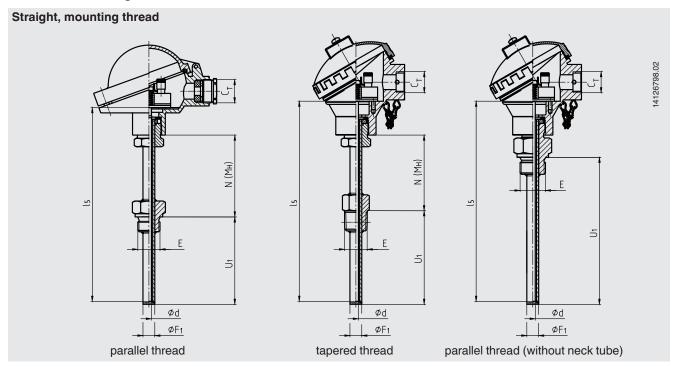

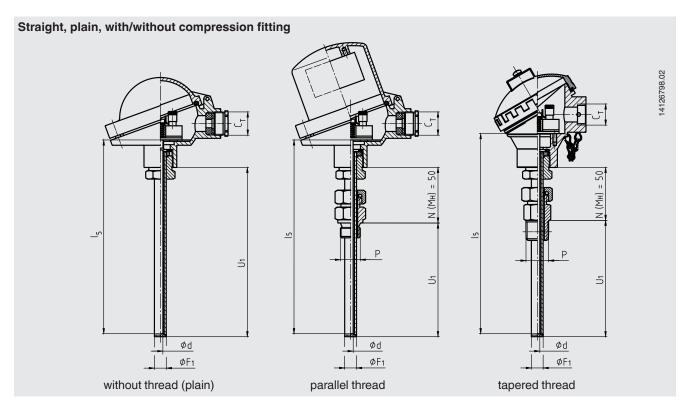

Legend:

 $\begin{array}{lll} \textbf{U}_1 & & \text{Insertion length} & & \varnothing \ \textbf{F}_1 & \text{Protection tube diameter} \\ \textbf{I}_5 & & \text{Measuring insert length} & & \textbf{E} & \text{Mounting thread} \end{array}$ 

#### **Protection tube**

The protection tubes are made of drawn tube with a welded bottom and are screwed into the connection head with a rotatable threaded connection (male nut). By loosening this male nut, the connection head, and thus the cable outlet, can be adjusted to the desired position. For the mounting thread version the process connection is welded on to customer specification. This determines the insertion length. The compression fitting process connection allows a variable insertion length. The immersion depth into the process medium should be at least 10 times the protection tube outer diameter.

#### **Protection tube versions**

Protection tube	Protection tube diameter	Process connection	Suitable for measuring insert diameter <sup>1)</sup>	Connection to head	Material
Straight, mounting thread	6 x 1 mm 8 x 1 mm	G 1/4 B, mounting thread G 1/2 B, mounting thread M18 x 1.5, mounting thread M20 x 1.5, mounting thread 1/2 NPT, mounting thread	3 mm	M24 x 1.5 (rotatable threaded connection, male nut)	1.4571 316L (8 x 1 mm)
	9 x 1 mm	G 1/4 B, mounting thread G 1/2 B, mounting thread G 3/4 B, mounting thread G 1 B, mounting thread M18 x 1.5, mounting thread M20 x 1.5, mounting thread M27 x 2, mounting thread 1/2 NPT, mounting thread 3/4 NPT, mounting thread	6 mm		1.4571
	10 x 1 mm 10 x 1.5 mm	G 1/2 B, mounting thread G 3/4 B, mounting thread G 1 B, mounting thread M18 x 1.5, mounting thread M20 x 1.5, mounting thread M27 x 2, mounting thread 1/2 NPT, mounting thread 3/4 NPT, mounting thread	6 mm		316L
	12 x 1 mm 12 x 1.5 mm	G 1/2 B, mounting thread G 3/4 B, mounting thread G 1 B, mounting thread M18 x 1.5, mounting thread M20 x 1.5, mounting thread M27 x 2, mounting thread 1/2 NPT, mounting thread 3/4 NPT, mounting thread	8 mm		316L
Straight, plain, with/without compression fitting	6 x 1 mm 8 x 1 mm	G 1/2 B compression fitting (metal ferrule) 1/2 NPT compression fitting (metal ferrule) Without threaded connection, plain	3 mm		1.4571 316L (8 x 1 mm)
	9 x 1 mm 10 x 1 mm 10 x 1.5 mm 12 x 1 mm 12 x 1.5 mm	G 1/2 B compression fitting (metal ferrule) 1/2 NPT compression fitting (metal ferrule) Without threaded connection, straight	6 mm		1.4571 (9 x 1 mm) 316L

<sup>1)</sup> Measuring insert optional

#### Insertion lengths

Protection tube design	Standard insertion length	Min. / Max. insertion length
Straight mounting thread	160, 250, 400 mm	50 mm / 500 mm
Straight, plain, with/without compression fitting	-	50 mm / 500 mm

#### **Neck lengths**

Protection tube design	Standard neck length	Min. / Max. neck length
Straight mounting thread	130 mm	30 mm / 200 mm
Straight, plain, with compression fitting	50 mm	50 mm
Straight, plain, without process connection	without	

The neck tube is screwed into the connection head. The neck length depends on the intended use. Usually an isolation is bridged by the neck tube. Also, in many cases, the neck tube serves as a cooling extension between the connection head and the medium, in order to protect any possible built-in transmitter from high medium temperatures.

Other versions on request

## **Measuring insert**

Standard: Not replaceable

Optionally, the measuring insert of model TR11-A is fitted

within the TR11-C.

## **Operating conditions**

#### Mechanical requirements

Version (	per EN 60751)
Standard	6 g peak-to-peak

The information on the vibration resistance refers to the tip of the measuring insert.

For detailed specifications for vibration resistance of Pt100 sensors, see Technical information IN 00.17 at www.wika.com.

#### Ambient and storage temperature

-40 ... +80 °C

#### Certificates

Certification type	Measurement accuracy	Material certificate 1)
2.2 test report	х	x
3.1 inspection certificate	х	x
DKD/DAkkS calibration certificate	X	-

1) Protection tubes

The different certifications can be combined with each other.

The minimum length (metal part of the probe) for carrying out a measurement accuracy test 3.1 or DKD/DAkkS is 100 mm. Calibration of shorter lengths on request.

Versions with exchangeable measuring insert: For calibration, the measuring insert is removed from the thermometer.

#### **Ordering information**

Model / Explosion protection / Further approvals, certificates / Sensor / Accuracy class, range of use of the sensor / Connection housing / Cable entry / Transmitter / Connection to neck tube / Protection tube / Protection tube diameter / Process connection / Protection tube material / Insertion length / Neck length / Certificates / Options

© 11/2015 WIKA Alexander Wiegand SE & Co. KG, all rights reserved.

The specifications given in this document represent the state of engineering at the time of publishing. We reserve the right to make modifications to the specifications and materials.

WIKA data sheet TE 60.14 · 03/2021

Page 14 of 14



Alexander-Wiegand-Straße 30 63911 Klingenberg/Germany Tel. +49 9372 132-0 Fax +49 9372 132-406

info@wika.de www.wika.de